



# Panasonic

2.4GHz Digital Cordless Phone

Model No. KX-TG2217S/KX-TG2215B  
KX-TG2215F/KX-TG2215P  
KX-TG2215PW/KX-TG2215PM

Pulse-or-tone dialing capability

## Operating Instructions



KX-TG2217S

Caller ID Compatible

**PLEASE READ BEFORE USE AND SAVE.**

**Charge the battery for about 15 hours before initial use.**

Panasonic World Wide Web address: <http://www.panasonic.com>  
for customers in the USA or Puerto Rico

Preparation

Basic Operation

Advanced Operation

Useful Information

# Before Initial Use

Please read **IMPORTANT SAFETY INSTRUCTIONS** on page 57 before use.  
Read and understand all instructions.


*Thank you for purchasing your new Panasonic cordless telephone.*

Caller ID and Call Waiting Service and Voice Mail Service, where available, are telephone company services. After subscribing to Caller ID, this phone will display a caller's name and phone number. Call Waiting Caller ID, which displays a second caller's name and phone number while the user is on the phone line with the first caller, requires a subscription to both Caller ID and Call Waiting Service. After subscribing to Voice Mail Service, this phone's VM indicator will flash when there are new messages left in the voice mail box at phone company.

**Attach your purchase receipt here.**


**Accessories (included)** For extra orders, call 1-800-332-5368.

- ☐ AC Adaptor (p. 11)  
Order No. KX-TCA1-G

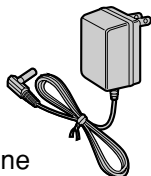


one

 - ☐ Telephone Line Cord  
(p. 11)  
Order No. PQJA10075Z



one

- ☐ Battery (p. 12, 51)  
Order No.  
PQPP511SVC  
(P-P511)

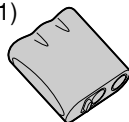


one

- ☐ Handset Cover  
(p. 12, 51)  
Order No.  
PQKK10127Z1(Silver)  
PQKK10127Y3(Black)  
PQKK10127Z5(Blue)  
PQKK10127Z6(Taupe)  
PQKK10127Z7  
(Peal White)  
PQKK10127Z4(Plum)




one

 - ☐ Wall Mounting  
Adaptor (p. 48)  
Order No.  
PQKL10035Z3(Silver)  
PQKL10035Z1  
(Black, Blue, Taupe)  
PQKL10035Z2  
(Peal White)



one

 - ☐ Belt Clip (p. 50)  
Order No.  
PQKE10341Z1(Silver)  
PQKE10341Z3  
(Black, Blue, Taupe)  
PQKE10341Z4  
(Peal White)




one

# For Best Performance

## Battery Charge

A rechargeable Ni-Cd battery powers the handset. Charge the battery for about **15 hours** before initial use (p. 12).

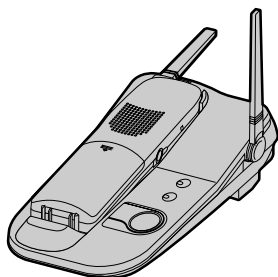


## Base Unit Location/Noise

Calls are transmitted between the base unit and the handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV, personal computer or another cordless phone.

In a **HIGH** and **CENTRAL** location with no obstructions such as walls.

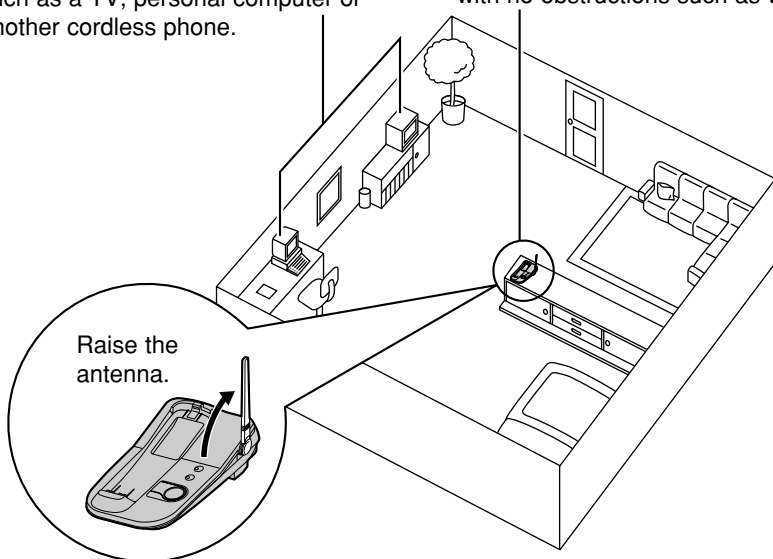

### Note:

While using the handset:

- If you are near a microwave oven which is being used, noise may be heard from the receiver or the speaker. Move away from the microwave oven and closer to the base unit.
- If more than one cordless phone is being used and your handset is near another cordless phone's base unit, noise may be heard. Move away from the other cordless phone's base unit and closer to your base unit.

# Contents

---

## *Preparation*

<b>Location of Controls</b> .....	6
<b>Display</b> .....	8
<b>Settings</b> .....	11
Connections .....	11
Installing the Battery in the Handset .....	12
Battery Charge .....	12
Dialing Mode .....	14
Line Mode .....	15
<b>Programmable Functions</b> .....	16
Auto Talk Feature .....	17
Ringer Volume .....	18
Ringer Pattern .....	19
LCD Contrast .....	20

## *Basic Operation*

<b>Making Calls</b> .....	21
<b>Answering Calls</b> .....	25
<b>Caller ID Service</b> .....	26
<b>Using the Caller List</b> .....	27
Viewing the Caller List .....	27
Calling Back from the Caller List .....	29
Editing the Caller's Phone Number .....	30
The Caller ID Number Auto Edit Feature .....	31
Storing Caller List Information in the Directory .....	32
Erasing Caller List Information .....	33

## *Advanced Operation*

<b>Directory</b> .....	34
Storing Names and Numbers .....	34
Entering Names and Symbols .....	36
Finding Stored Items .....	38
Dialing .....	39
Editing .....	40
Erasing .....	41
<b>Voice Mail Service</b> .....	42
Storing a Voice Mail Access Number .....	42
Setting the Voice Mail Tone .....	43
Listening to Voice Mail Messages .....	44

<b>Special Features</b> .....	45
Automatic Security Code Setting .....	45
Temporary Tone Dialing (For Rotary or Pulse Service Users) .....	45
Muting Your Conversation .....	45
For Call Waiting Service Users .....	46
How to Use the PAUSE Button (For Analog PBX Line/Long Distance Service Users) .....	46
Handset Locator .....	46
FLASH Button .....	47


## ***Useful Information***

<b>Wall Mounting</b> .....	48
<b>Belt Clip</b> .....	50
<b>Optional Headset</b> .....	50
<b>Battery Replacement</b> .....	51
<b>Adding Another Phone</b> .....	52
<b>Troubleshooting</b> .....	<b>53</b>
<b>Important Safety Instructions</b> .....	57
<b>FCC and Other Information</b> .....	59
<b>Index</b> .....	62

# Location of Controls

---

## Base unit

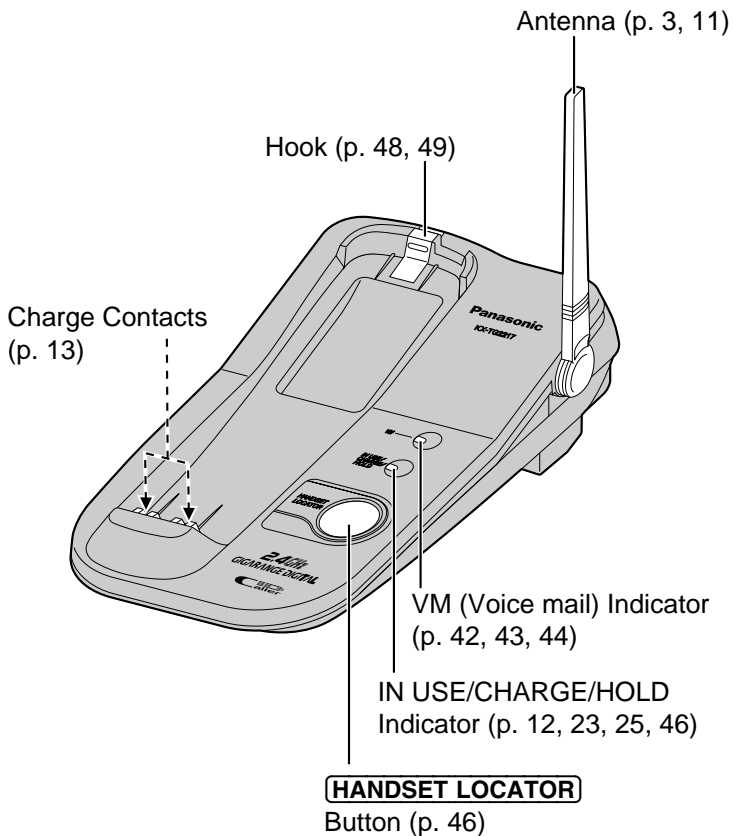





# Display

 ---



 The handset shows you instructions and information on the display. These display prompts are shown below.




The battery needs to be charged. Place the handset on the base unit to charge the battery (p. 13).





 
(Handset on the base unit)



 The display shows that you have received new calls (p. 27). To check the new calls, lift the handset and press  or .






 
(Handset off the base unit)

The display shows that you have received new calls (p. 27). To check the new calls, press  or .

 


This display shows the number of new calls when  or  is pressed while the handset is off the base unit.


To search from the most recent call, press . To search from the oldest call, press  (p. 27). To go to the directory list, press  (Directory key).



The display shows the voice mail message(s) is/are recorded (p. 44).



 When the handset ringer volume is set to OFF (p. 18), "Ringer off" will flash for about 45 seconds after completing operations such as talk, viewing the Caller List or programming.



When a call is received, the display shows the caller's name and number after the first ring.





Talk

01-06-35 [||||]

During a conversation, the display shows the length of the call (ex. 1 hour, 6 minutes and 35 seconds). The battery strength is also displayed (p. 13).

No link to base  
Place on cradle  
and try again.

The handset has lost communication with the base unit. Place the handset on the base unit and try again.

SMITH, JACK  
1-222-333-4444  
11:20A JAN10 X3

This is a name from the Caller List.

The display shows:

- the caller's name,
- the caller's number,
- the time and date of the last call (ex. Jan. 10, 11:20 AM), and
- the number of times called (ex. 3 times).

Ann  
123-456-7890

This is a name from the directory. The stored name and phone number are displayed.

Paging

The base unit is paging the handset (p. 46).

BROWN, NANCY  
1-555-666-7777  
----Waiting----

A second call is received during a conversation (p. 46).

## Display

---

Please lift up  
and try again.

▼, ▲, ◀ or ▶ was pressed while the handset was on the base unit. Lift the handset and press the button again.

Directory full


When trying to store an item or Caller List information in the directory, the directory memory is full (p. 32, 35).

Save error

While programming procedure, the handset has lost communication with the base unit. Move closer to the base unit and try again.




## Connections

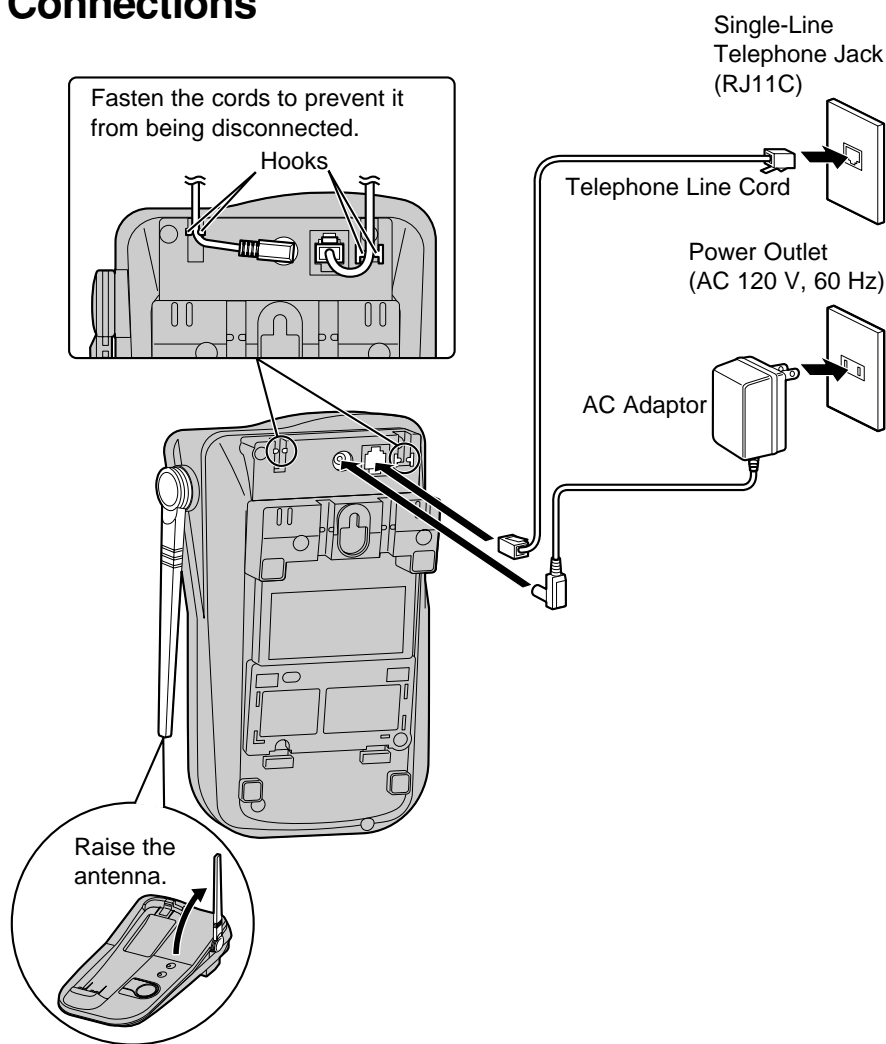

- USE ONLY WITH Panasonic AC ADAPTOR KX-TCA1 (Order No. KX-TCA1-G).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see page 52.
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.

### Installing the Battery in the Handset


Insert the battery into the handset as shown (①), matching the correct polarity. Press the battery down until it places into the compartment (②). When finished, close the cover.

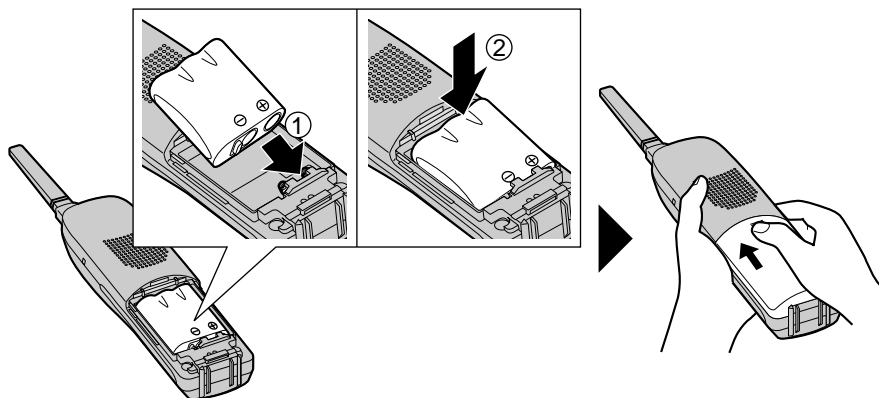

### Battery Charge

Place the handset on the base unit and charge for about **15 hours** before initial use.

- The IN USE/CHARGE/HOLD indicator lights and a beep sounds.

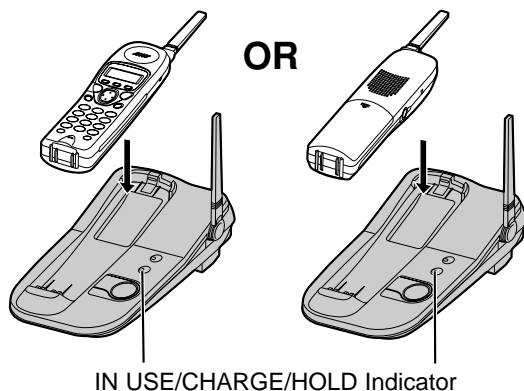



## Battery strength

 
You can check the battery strength on the handset display. The battery strength is as shown in the chart below.

Display prompt	Battery strength
{ ■■■ }	Fully charged
{ ■ ■ }	Medium
{ ■ }	Low
⚡ { ■ } ⚡ (flashing)	Needs to be recharged.

## Recharge

Recharge the battery when:

- “Recharge” is displayed on the handset,
- “{ ■ }” flashes on the display, or
- the handset beeps intermittently while it is in use.



- If you DO NOT recharge the handset battery for more than 15 minutes, the display will keep indicating “Recharge” and/or “{ ■ }” will continue to flash.

## Battery information

After your Panasonic battery is fully charged (p. 12):

Operation	Operating time
While in use (TALK)	Up to 5 hours
While not in use (Standby)	Up to 11 days

- The battery operating time may be shortened depending on usage conditions, such as viewing the Caller ID Caller List or directory list, and ambient temperature.
- Clean the handset and the base unit charge contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until “Recharge” is displayed and/or “{ ■ }” flashes. This will maximize the battery life.
- The battery cannot be overcharged.

### Dialing Mode

If you have touch tone service, set to "Tone". If rotary or pulse service is used, set to "Pulse". Your phone comes from the factory set to "Tone".

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

```
-----
▶Save directory
  Ringer volume
```

2 Scroll to "Program" by pressing ▼ or ▲.

```
  Ringer pattern
▶Program
-----
```

3 Press ▶.

```
-----
▶Set flash time
  Save mailbox#
```

4 Scroll to "Set dial mode" by pressing ▼ or ▲.

```
  Set line mode
▶Set dial mode
  Talk switching
```

5 Press ▶.

```
Dial mode
           :Tone
▼▲         ▶=Save
```

6 Select "Pulse" or "Tone" by pressing ▼ or ▲.

```
Dial mode
           :Pulse
▼▲         ▶=Save
```

7 Press ▶ (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

```
Dial mode
           :Pulse
```

•You can exit the programming mode any time by pressing **OFF**.

## Line Mode

If the line is connected to a low voltage system such as a PBX, set to "B". Your phone comes from the factory set to "A".

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

```

-----
▶Save directory
  Ringer volume
  
```

2 Scroll to "Program" by pressing ▼ or ▲.

```

  Ringer pattern
▶Program
-----
  
```

3 Press ►.

```

-----
▶Set flash time
  Save mailbox#
  
```

4 Scroll to "Set line mode" by pressing ▼ or ▲.

```

  Voicemail tone
▶Set line mode
  Set dial mode
  
```

5 Press ►.

```

  Line mode
                                :A
▼▲                               ▶=Save
  
```

6 Select "B" or "A" by pressing ▼ or ▲.

```

  Line mode
                                :B
▼▲                               ▶=Save
  
```

7 Press ► (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

```

  Line mode
                                :B
  
```

•You can exit the programming mode any time by pressing **OFF**.

# Programmable Functions

You can program the following function items **using the handset near the base unit**. The display shows the programming instructions. See the corresponding pages for function details. **Make sure the unit is not being used and the handset is lifted off the base unit.**

Press **[FUNCTION]**.

<Function menu>\*

-----  
▶Save directory..... To store an item in the directory (p. 35).  
Ringer volume ..... To select the ringer volume (p. 18).  
Ringer pattern..... To select the ringer pattern (p. 19).  
Program  
-----

Press **[▶]**.

<Function menu>\*

-----  
▶Set flash time ..... To select the flash time (p. 47).  
Save mailbox# ..... To store a voice mail access number (p. 42).  
Voicemail tone ..... To set the voice mail tone (p. 43).  
Set line mode ..... To select the line mode (p. 15).  
Set dial mode ..... To select the dial mode (p. 14).  
Talk switching ..... To set the Auto Talk feature (p. 17).  
CallerID edit ..... To set the Caller ID Number Auto Edit feature (p. 31).  
LCD contrast ..... To select the LCD contrast (p. 20).  
-----

## During programming:

\*To select a desired function item, scroll through the items by pressing **[▼]** or **[▲]**. Then press **[▶]** to go to the next step.

- “-----” indicates the beginning or end of the function menu.
- You can exit the programming mode any time by pressing **[OFF]**.
- If you do not press any buttons for 60 seconds, the unit will exit the programming mode.
- If the handset has lost communication with the base unit, 3 beeps sound and “No link to base Place on cradle and try again.” is displayed.





## Auto Talk Feature

The Auto Talk feature allows you to answer a call by lifting the handset off the base unit without pressing or . If you want to use this feature, turn the feature ON by programming. Your phone comes from the factory set to OFF.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

2 Scroll to "Program" by pressing or .

```
Ringer pattern
▶Program
-----
```

3 Press .

4 Scroll to "Talk switching" by pressing or .

```
Set dial mode
▶Talk switching
CallerID edit
```

5 Press .

```
Auto talk
:Off
▼▲ ▶=Save
```

6 Select "On" or "Off" by pressing or .

```
Auto talk
:On
▼▲ ▶=Save
```

7 Press (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

```
Auto talk
:On
```

- You can exit the programming mode any time by pressing **OFF**.
- In order to view Caller ID information after you lift up the handset to answer a call, leave the Auto Talk feature OFF.

## ➡ Programmable Functions

### Ringer Volume

You can program the handset ringer volume to HIGH, LOW or OFF. If set to OFF, the handset will not ring. Your phone comes from the factory set to HIGH.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

2 Scroll to "Ringer volume" by pressing ▼ or ▲.

Save directory  
►Ringer volume  
Ringer pattern


3 Press ►.

4 Select the desired volume by pressing ▼ or ▲.

- Each time you press ▼ or ▲, the volume will change and ring.
- If you set to OFF, the unit will not ring.

5 Press ► (Save key).

- A beep sounds.

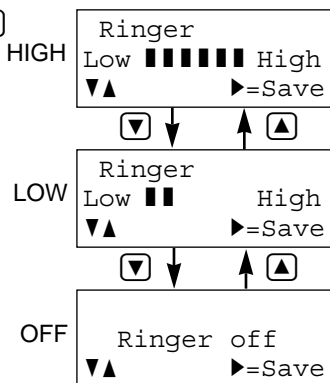

- You can exit the programming mode any time by pressing **OFF**.
- When you replace the battery, the selected ringer volume setting will return to the factory set (HIGH). Reprogram if necessary.



## Ringer Pattern

You can select the handset ringer pattern out of 6 patterns. When an incoming call is being received, the unit rings in the selected pattern. Your phone comes from the factory set to 1.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

2 Scroll to "Ringer pattern" by pressing ▼ or ▲.

```
Ringer volume
▶Ringer pattern
Program
```

3 Press ▶.  
•The current setting is displayed.

```
Ringer pattern
:1
▼▲ ▶=Save
```

4 Select the desired ringer pattern by pressing ▼ or ▲.  
•Each time you press ▼ or ▲, the ringer pattern will change and ring.  
•You can also select the ringer pattern by pressing dialing buttons **1** to **6**.  
•If you set the ringer volume to OFF, the handset will not ring (p. 18).

```
Ringer pattern
:3
▼▲ ▶=Save
```

5 Press ▶ (Save key).  
•A beep sounds.  
•To exit the programming mode, press **OFF**.

```
Ringer pattern
:3
```

•You can exit the programming mode any time by pressing **OFF**.

## ➡ Programmable Functions

### LCD Contrast

You can program the handset LCD contrast (5 levels). To make the handset display clearer, set to high level. Your phone comes from the factory set to level 3.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

2 Scroll to "Program" by pressing ▼ or ▲.

```
Ringer pattern
▶Program
-----
```

3 Press ▶.

4 Scroll to "LCD contrast" by pressing ▼ or ▲.

```
CallerID edit
▶LCD contrast
-----
```

5 Press ▶.

```
LCD contrast
Low  ■■■  High
▼▲          ▶=Save
```

6 Select the desired contrast by pressing ▼ or ▲.

- Each time you press ▼ or ▲, the LCD contrast will change.


7 Press ▶ (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

```
LCD contrast
Low  ■  High
```

- You can exit the programming mode any time by pressing **OFF**.

# Making Calls

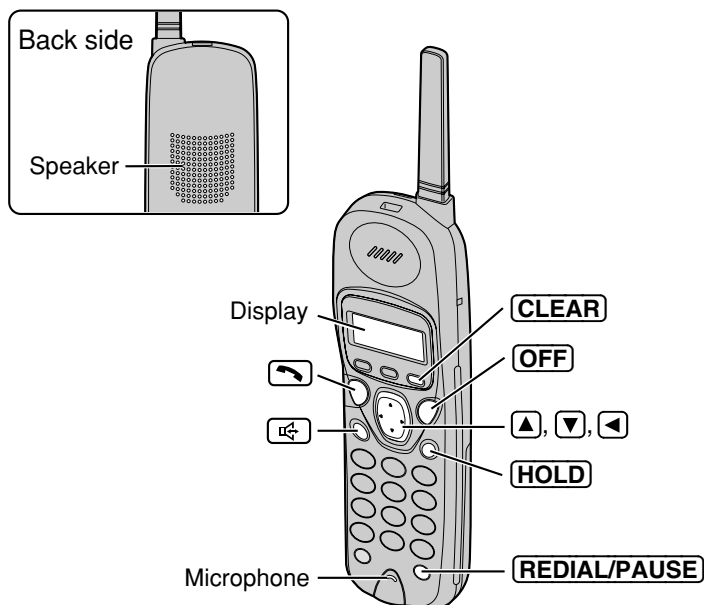

1 Press .

Talk

2 Dial a phone number.

- The dialed number is displayed.
- After a few seconds, the display will show the length of the call and the battery strength.

Talk  
1112222

Talk  
00-00-00 {■■■■}

3 To hang up, press **OFF** or place the handset on the base unit.






Off  
00-01-08 {■■■■}

- If the handset has lost communication with the base unit, 3 beeps sound and "No link to base Place on cradle and try again." is displayed.

---

### Hands-free Digital Duplex Speakerphone

 For best performance, please note the following:

- Talk alternately with the caller in a quiet room.
- If the other party has difficulty hearing you, press  to decrease the speaker volume.
- If the other party's voice from the speaker cuts in/out during a conversation, press  to decrease the speaker volume.
- While talking using  , you can switch to the hands-free phone conversation by pressing  . To switch back to the receiver, press .



## To dial after confirming the entered number

- 1 Dial a phone number.
  - If you misdial, press **CLEAR**. One digit is erased. Dial the correct phone number.
- 2 Press .
 

OR

To have a hands-free phone conversation, press , and when the other party answers, talk into the microphone.

  - After a few seconds, the display will show the length of the call and the battery strength.
- 3 To hang up, press **OFF** or place the handset on the base unit.

33344444

Ex. was pressed.

Talk  
33344444

Talk  
00-00-00 {■■■■}

## To redial using the redial list (Memory Redial)

The last 5 phone numbers dialed with the handset are stored in the redial list.

1. Press **REDIAL/PAUSE**.
  - The last number dialed is displayed.
2. Scroll to the desired number by pressing or .
  - You can also scroll through the list by pressing **REDIAL/PAUSE**.
  - To exit the list, press **OFF**.
3. Press or .

333-4444  
▼▲Redial list

- To erase an item, repeat steps 1 and 2, and press **CLEAR**.
- If "No items stored" is displayed, the list is empty.

## To put a call on hold

Press **HOLD**.

- "Hold" is displayed.
- The IN USE/CHARGE/HOLD indicator on the base unit flashes.
- If you put a call on hold for more than 6 minutes, an alarm tone will sound. The call will be disconnected after a total of 10 minutes.

Hold  
00-00-08 {■■■■}


## To release the hold


Lift the handset, or press or .

- If another phone is connected on the same line (p. 52), you can also release the hold by lifting its handset.

## ➡ Making Calls



### To adjust the receiver volume (HIGH, MEDIUM or LOW) or speaker volume (6 levels) while talking


To increase, press .

To decrease, press .



- The display will return to the length of the call.

#### While using

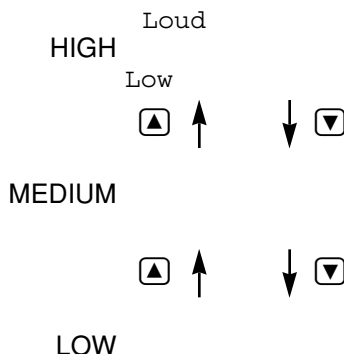- Each time you press  or , the volume level will change among 3 levels (HIGH, MEDIUM or LOW). Your phone comes from the factory set to level MEDIUM.



#### While using

- Each time you press  or , the volume level will change among 6 levels. Your phone comes from the factory set to level 3.

Ex. Speaker volume:  
level 6

- When you replace the battery, the selected receiver/speaker volume setting will return to the factory set. Reprogram if necessary.

### Lighted handset keypad (KX-TG2217S only)

The handset dialing buttons will light when you press a button or lift the handset off the base unit. They flash when a call is received with the handset off the base unit.

The lights will go out a few seconds after pressing a button, lifting the handset, answering a call, hanging up a call, leaving the programming mode.

### Backlit LCD display

The lighted handset display will stay on for a few seconds after pressing a handset button, lifting the handset off the base unit, hanging up a call, or leaving the programming mode.



When a call is received, the unit rings and “Incoming call” is displayed and the IN USE/CHARGE/HOLD indicator on the base unit fl

- When the handset ringer volume is set to OFF, it will not ring (p. 18).

# Caller ID Service

This unit is compatible with a Caller ID service offered by your telephone company. If you subscribe to a Caller ID service, the calling party's information will be shown on the handset after the first ring.

The unit can record information of up to 30 different callers, including the time and date received and the number of times called, in the Caller List. The Caller List information is sorted by the most recent to the oldest call. When the 31st call is received, the first call is deleted.

Using the list, you can automatically call back a caller. You can store the callers' names and numbers from the Caller List into the directory.

If you subscribe to both Caller ID and Call Waiting services, when a second call is received while talking, the new caller's name and phone number will be displayed (p. 46).

## How caller information is displayed when a call is received

The handset display shows the caller's name and phone number after the first ring.

After you answer the call, the display will show the length of the call and the battery strength.

ROBINSON, TINA  
1-000-222-3333



Talk  
00-00-00 [■■■■]



- Caller information cannot be displayed in the following cases:
  - If the caller dialed from an area which does not provide a Caller ID service, the display will show "Out of area".
  - If the caller has requested not to display his/her information, the display will show "Private caller".
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.
- The name display service may not be available in some areas. For further information, please contact your telephone company.

# Using the Caller List



If you have received new calls, "Received calls" will be displayed while the unit is not in use.

Handset on the base unit

Received calls  
{■■■}

Handset off the base unit

Received calls▼  
{■■■}

## Viewing the Caller List

To check who has called, follow the steps below.

**Make sure the unit is not being used and the handset is lifted off the base unit.**


- 1 Press ▼ or ▲ to enter the Caller List.
  - The display will show, for example, the following.

2 new calls  
▼▲ ▶=Directory

- You can go to the directory list by pressing ▶ (p. 38).

- 2 To search from the most recent call, press ▼.  
To search from the oldest call, press ▲.
  - To scroll between callers, press ▼ or ▲.

- 3 To exit the list, press OFF.

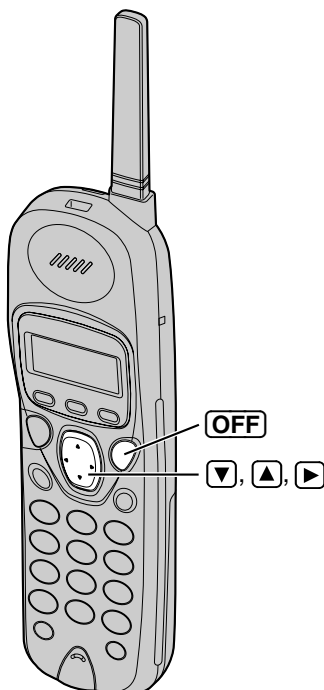

- Once new calls have been checked, "√" will be added.
- If "No items stored" is displayed in step 1, the Caller List is empty.
- If more than one call is received from the same caller, the date and time of the most recent call will be recorded. If the same caller calls again, the call entry with "√" will be deleted.
- If you do not press any buttons for 60 seconds, the unit will exit the Caller List.
- After viewing all of the new call entries, "Received calls" will disappear.

## ➡ Using the Caller List

**Ex. When you search from the most recent call:**

Press **▼** or **▲** to enter the Caller List.

2 new calls  
**▼▲ ▶=Directory**

Press **▼**.

SMITH, JACK  
1-222-333-4444  
3:10P JUN10

•If there is no name information for a caller, the display will only show the phone number.

Press **▼**.

BROWN, NANCY  
222-3333  
1:54P JUN 9 X3

**To return to the previous caller,**  
press **▲**.

Press **▼**.

TURNER, CINDY  
1-234-456-7890  
10:38A JUN 9 ✓

**To exit the Caller List,**  
press **OFF**.

Press **▼**.


0 new call  
**▼▲ ▶=Directory**

Press **▼**.


 
### Display meaning:



- ✓ : You have checked this caller information, answered the call or called back the caller.
- x2-x9 : The number of times the same caller called (up to 9).  
After checking, "x2" – "x9" will be replaced with "✓".
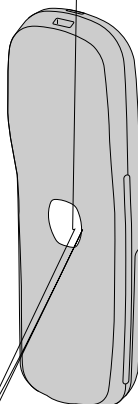
# Calling Back from the Caller List





**1** Press  or  to enter the Caller List.

3 new calls  
  =Directory

**2** Scroll to the desired caller by pressing  or .

TURNER, CINDY  
 1-234-456-7890  
 11:20A JAN12 X3

**3** Press  or .

- The displayed phone number is dialed automatically.

Talk  
 12344567890

- In some cases, you may have to edit the number before dialing (p. 30).  
 (Ex. You may have to delete "1" and the area code.)
- If a phone number is not displayed in the caller information, you cannot call back that caller.

## ➡ Using the Caller List

### Editing the Caller's Phone Number

You can edit a phone number into one of 3 patterns (see below ①, ②, and ③ on this page) to call back or store it into the directory.

#### The Caller ID Number Auto Edit Feature (p. 31)

This feature will allow the unit to edit a Caller ID number into one of 3 patterns you desired for you automatically in the Caller List. For detail and activation please see page 31.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press ▼ or ▲ to enter the Caller List.

5 new calls  
▼▲ ▶=Directory

2 Scroll to the desired caller by pressing ▼ or ▲, and press ▶.

PARKER, FRED  
1-234-321-5555  
11:20A JAN12 ✓

▶Edit  
Save directory  
▼▲ ▶=Yes

3 Press ▶ (Yes key) at "Edit".

PARKER, FRED  
1-234-321-5555  
▼=Next ▶=Edit

4 Press ▶ (Edit key) to select a pattern.

- Each time you press ▶, the number is rearranged into one of 3 patterns.

① Phone no. (7 digit pattern)

① 321-5555  
▼=Next ▶=Edit

② Area code - Phone no. (10 digit pattern)

② 234-321-5555  
▼=Next ▶=Edit

③ 1 - Area code - Phone no. (11 digit pattern)

③ 1-234-321-5555  
▼=Next ▶=Edit

- The order in which patterns ①-③ are displayed depends on how the telephone number is displayed in step 3.

5 After editing the number, you can continue with calling back or storing procedures.

To call back, press ☎ or ☎ (p. 29).

To store the number in the directory, press ▼ (Next key). Follow the instructions on the display (p. 32). (If the caller has no name information, see page 32, from step 3.)



## The Caller ID Number Auto Edit Feature

There are 3 patterns of phone number (Ⓐ, Ⓑ, and Ⓒ, p. 30). This feature allows your phone to automatically edit an in-coming Caller ID number into one pattern you preferred, and display the Caller ID number with that pattern on the handset automatically.

After this feature is activated, Caller ID numbers coming from considered area codes (201, for example), from which the Caller ID numbers have been chosen to follow the desired pattern (7 digit pattern, for example), will be automatically edited from other patterns (11 digit pattern, for example) into the same pattern you have previously selected (which is 7 digit pattern, in the example).

Up to 4 area codes are allowed for this feature for pattern Ⓐ and Ⓑ (p. 30).

To activate this feature, you must 1) set this feature to on, and 2) make an out-going call from Caller List (p. 29) with a number which has one of 3 patterns that you have edited with considered area code, and that you prefer to be followed by future Caller ID numbers, so that in the future all the Caller ID numbers coming from the same area code will be displayed in the same pattern.

The Caller ID number Auto Edit feature is preset to ON at factory.

- If you fail to reach your destination when making the call, the phone number you dialed might have an incorrect pattern, please edit the phone number with another pattern (p. 30).

For example, if you move to another area, you may need to turn this feature to OFF to erase previously edited area codes. Then, if still need, you may activate this feature again.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1. Press **FUNCTION**.
2. Scroll to "Program" by pressing or and press .
3. Scroll to "CallerID edit" by pressing or .
4. Press .
5. Select "On" or "Off" by pressing or .
6. Press (Save key).
  - A beep sounds.
  - To exit the programming mode, press **OFF**.

Ringer pattern
▶Program
-----

Talk switching
▶CallerID edit
LCD contrast

- When the feature is set to OFF, the unit will still be able to display Caller ID, like regular Caller ID telephone, but the in-coming Caller ID number will not be edited by pattern and by area codes.

## ➡ Using the Caller List

### Storing Caller List Information in the Directory

You can store phone numbers that are in the Caller List into the directory. **Make sure the unit is not being used and the handset is lifted off the base unit.**

- 1 Press ▼ or ▲ to enter the Caller List.

10 new calls  
▼▲ ▶=Directory

- 2 Scroll to the caller you want to store in the directory by pressing ▼ or ▲, and press ▶.
- If the number requires editing, see page 30.

TURNER, CINDY  
1-234-456-7890  
11:20A JAN12 X3

▶Edit  
Save directory  
▼▲ ▶=Yes

- 3 Scroll to "Save directory" by pressing ▼ or ▲, and press ▶.

Edit  
▶Save directory  
▼▲ ▶=Yes

**If there is no name information for the caller, "Enter name" will be displayed.**

- If a name is not required, press ▼ (Next key) and press ▶ (Save key).
- If a name is required, enter the name (p. 36). When finished, press ▼ (Next key) and press ▶ (Save key).

Enter name  
◀▶ ▼=Next

Enter name  
CINDY TURNER  
◀▶ ▼=Next

- A beep sounds.
- To continue storing other items, repeat from step 2.
- To exit the programming mode, press **OFF**.

CINDY TURNER  
1-234-456-7890

- You can exit the programming mode any time by pressing **OFF**.
- If the display shows "Directory full" in step 3, press **OFF** to exit the list. To erase other stored items from the directory, see page 41.
- You cannot store caller information in the directory if a phone number is not displayed.
- If an alarm tone sounds in step 3, the item cannot be stored in the directory. Place the handset on the base unit and try again from step 1.





## Erasing Caller List Information



After checking the Caller List, you can erase some or all of the entries.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

### To erase a specific caller from the Caller List

- 1 Press  or  to enter the Caller List.

10 new calls  
▼▲ ▶=Directory

- 2 Scroll to the caller you want to erase from the Caller List by pressing  or .



REAGAN, TOM  
1-888-777-6666  
12:20A JAN12 ✓

- 3 Press **CLEAR**.
  - A beep sounds and the information is erased.
  - To erase other items, repeat from step 2.
  - To exit the Caller List, press **OFF**.

Clear

### To erase all entries in the Caller List



Before erasing all entries, make sure that "0 new call" is displayed.

- 1 Press  or  to enter the Caller List.


0 new call  
▼▲ ▶=Directory

- 2 Press **CLEAR**.

▶Exit  
All clear  
▼▲ ▶=Yes

- 3 Select "All clear" by pressing  or .

Exit  
▶All clear  
▼▲ ▶=Yes

- 4 Press  (Yes key) or **CLEAR**.
  - A beep sounds and all entries are erased.
  - The handset will exit the Caller List.

All clear


# Directory

---

You can store up to 50 names and phone numbers in the directory using the handset. All directory items are sorted by the first word in alphabetical order. Using the directory, you can make a call by selecting a name on the handset display.

## Storing Names and Numbers

**Make sure the unit is not being used and the handset is lifted off the base unit.**

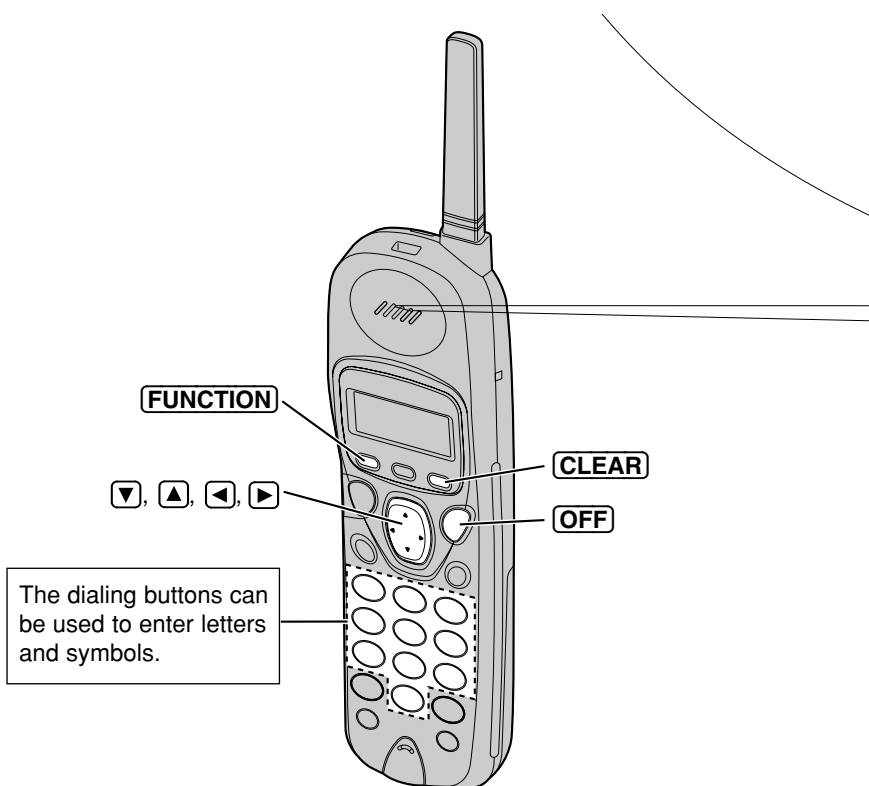



1 Press **FUNCTION**.

-----  
►Save directory  
Ringer volume

2 Press **▶** at "Save directory".  
•The display shows the number of stored items in the directory.

Directory=  
20 items

3 Enter a name, up to 15 characters with the dialing buttons, **◀** or **▶**.  
•See the steps for entering names and symbols (p. 36).  
•If a name is not required, press **▼** (Next key) and go to step 5.

Enter name  
◀ ▶ ▼=Next

Enter name  
Tom Jones  
◀ ▶ ▼=Next

4 Press **▼** (Next key).

Enter phone no.

5 Enter a phone number, up to 22 digits.  
•Each time you press **CLEAR**, a digit is erased. To erase all of the digits, press and hold **CLEAR**.

0987654321  
◀ ▶ ▼=Next

6 Press **▼** (Next key).  
•If you want to change the storing name or number, press **▲** (Edit key) repeatedly to reach the desired display and change it.

Tom Jones  
098-765-4321  
▲=Edit ▶=Save


7 Press **▶** (Save key).  
•A beep sounds.  
•To continue storing other items, repeat from step 2.  
•To exit the programming mode, press **OFF**.

Tom Jones  
098-765-4321

- If a pause is required for dialing, **REDIAL/PAUSE** can be stored in a phone number counting as one digit (p. 46) in step 5.
- You can exit the programming mode any time by pressing **OFF**.
- If the display shows "Directory full" in step 2, the display will return to step 1, press **OFF** to exit the programming mode. To erase other stored items from the directory, see page 41.
- If an alarm tone sounds in step 7, the item cannot be stored in the directory. Place the handset on the base unit and try again from step 1.

## Entering Names and Symbols

The handset dialing buttons (0 to 9), ◀ and ▶ can be used to enter letters and symbols. The letters are printed on the dialing buttons. Pressing each button selects a character as shown below.

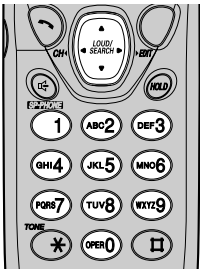

	Number of times key is pressed										
Keys	1	2	3	4	5	6	7	8	9	10	11
1	#	&	'	(	)	*	,	–	.	/	1
2	a	b	c	A	B	C	2				
3	d	e	f	D	E	F	3				
4	g	h	i	G	H	I	4				
5	j	k	l	J	K	L	5				
6	m	n	o	M	N	O	6				
7	p	q	r	s	P	Q	R	S	7		
8	t	u	v	T	U	V	8				
9	w	x	y	z	W	X	Y	Z	9		
0	0	Blank									
◀	To move the cursor to the left										
▶	To move the cursor to the right										

•To enter another character using the same dialing button, press ▶ to move the cursor to the next space.

### If you make a mistake while entering a name

Use ◀ or ▶ to move the cursor to the incorrect character, press **CLEAR** to delete and enter the correct character. Each time you press **CLEAR**, a character is erased. To erase all characters, press and hold **CLEAR**.



## For example, to enter “Tom Jones”:

- 1 Press **FUNCTION**.  

-----  
▶Save directory  
Ringer volume
- 2 Press **▶** at “Save directory”.  

Directory=  
20 items

Enter name  
█  
◀▶ ▼=Next
- 3 Press **8** four times.  

T
- 4 Press **6** three times, then press **▶** to move the cursor to the right.  

To █
- 5 Press **6**.  

Tom
- 6 Press **▶** twice to enter a blank.  

Tom █
- 7 Press **5** four times.  

Tom J
- 8 Press **6** three times, then press **▶** to move the cursor to the right.  

Tom Jo █
- 9 Press **6** twice.  

Tom Jon █
- 10 Press **3** twice.  

Tom Jones █
- 11 Press **7** four times.  

Enter name  
Tom Jones  
█  
◀▶ ▼=Next
- 12 When finished, press **▼** (Next key).  
  - Follow steps 5 to 7 on page 35 to complete the operation.

Enter phone no.

•While entering names, the cursor will flash on the display.


## Finding Stored Items

You can search the directory using the handset.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

- 1 Press or to enter the directory list.

Directory list  
▼▲  
▶=Caller's list

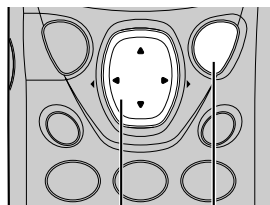

- You can go to the Caller List by pressing (p. 27).

, , , **OFF**

- 2 Press or .

- The first item is displayed.

Ann  
123-456-7890

- 3 Scroll to the desired caller by pressing or .


- All directory items are stored in the order shown on the right.

### To search for a name by initial

- ① Press the dialing button for the first letter of the desired name until any name with the same initial is displayed (See the Index table on page 39).

Ex. To find "Frank", press repeatedly until the first item under "F" is displayed.

- ② Press repeatedly until the name is displayed.

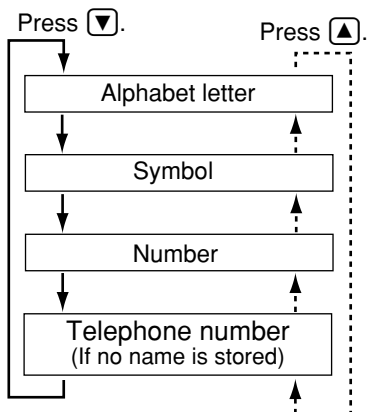

- You can exit the directory list any time by pressing **OFF**.
- If "No items stored" is displayed in step 2, the directory list is empty.



## Index table

Keys	Index	Keys	Index
[1]	Other symbols, 1	[6]	M, N, O, 6
[2]	A, B, C, 2	[7]	P, Q, R, S, 7
[3]	D, E, F, 3	[8]	T, U, V, 8
[4]	G, H, I, 4	[9]	W, X, Y, Z, 9
[5]	J, K, L, 5	[0]	0

## Dialing

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press [◀] or [▶] to enter the directory list.

Directory list  
▼▲  
▶=Caller's list

2 Press [▼] or [▲].  
•The first item is displayed.

3 Scroll to the desired item that you want to dial by pressing [▼] or [▲].  
•To search for the item by initial, see page 38.  
•To exit the directory list, press [OFF].

Frank  
456-7890

4 Press [☎] or [☎].  
•The number is dialed automatically.

Ex. [☎] was pressed.

Talk  
4567890

5 To hang up, press [OFF] or place the handset on the base unit.

•You can exit the directory list any time by pressing [OFF].

## ➡ Directory

### Editing

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press ◀ or ▶ to enter the directory list.

2 Press ▼ or ▲.  
•The first item is displayed.

3 Scroll to the directory item you want to change by pressing ▼ or ▲, and press ▶.

- To search for the item by initial, see page 38.
- If you do not need to change the name, go to step 5.

Jane  
456-7890

Enter name  
Jane  
◀▶ ▼=Next

4 Edit the name using the dialing buttons, ◀ or ▶ (p. 36), up to 15 characters.

Enter name  
Jane Walker  
◀▶ ▼=Next

5 Press ▼ (Next key).

4567890  
◀▶ ▼=Next

6 Add a number to the current number.

- If you do not need to change the number, press ▼ (Next key) and go to step 8.
- Each time you press **CLEAR**, a digit is erased. To erase all digits, press and hold **CLEAR**.

12344567890  
◀▶ ▼=Next

7 Press ▼ (Next key).

- If you want to change the storing name or number, press ▲ (Edit key) repeatedly to reach the desired display and change it.

Jane Walker  
1-234-456-7890  
▲=Edit ▶=Save

8 When finished, press ▶ (Save key).

- A beep sounds.
- To continue editing other items, repeat from step 3.
- To exit the directory list, press **OFF**.

Jane Walker  
1-234-456-7890

•You can exit the directory mode any time by pressing **OFF**.



## Erasing

Make sure the unit is not being used and the handset is lifted off the base unit.

1 Press ◀ or ▶ to enter the directory list.

2 Press ▼ or ▲.  
•The first item is displayed.

3 Scroll to the directory item that you want to erase by pressing ▼ or ▲.  
•To search for the item by initial, see page 38.

Helen  
1-234-567-8901

4 Press **CLEAR**.  
•To stop erasing, press ◀ (No key).

Clear?  
◀=No ▶=Yes

5 Press ▶ (Yes key) or **CLEAR**.  
•A beep sounds and the item is erased.  
•To erase other items, repeat from step 3.  
•To exit the programming mode, press **OFF**.

Clear

•You can exit the programming mode any time by pressing **OFF**.

# Voice Mail Service

Voice mail service is an electronic on-line answering system offered by your telephone company. After subscribing, the voice mail system can answer calls automatically when your line is busy or if calls are not answered. Callers can leave messages by following the pre-recorded instructions. When voice mail messages are recorded, "Voicemail" will be displayed and the VM (Voice mail) indicator will flash.

To use this feature, you must first store your access number.

## Storing a Voice Mail Access Number

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

2 Scroll to "Program" by pressing **▼** or **▲**.

Ringer pattern  
▶Program  
-----

3 Press **▶**.

4 Scroll to "Save mailbox#" by pressing **▼** or **▲**.

Set flash time  
▶Save mailbox#  
Voicemail tone

5 Press **▶**.

6 Enter your access number, up to 32 digits.  
•You may enter pauses\*.  
•Each time you press **CLEAR**, a digit is erased. To erase all digits, press and hold **CLEAR**.

1234567PPP890 **■**  
◀▶ **▼=Next**

7 Press **▼** (Next key).  
•If you want to edit the entered number, press **▲** (Edit key) and return to step 6.

1234567PPP890  
▲=Edit ▶=Save

8 Press **▶** (Save key).  
•A beep sounds.  
•To exit the programming mode, press **OFF**.

1234567PPP890  
Save mailbox#

•You can exit the programming mode any time by pressing **OFF**.

## To erase a stored number

Repeat steps 1 through 5 → Press and hold **CLEAR** until all of the digits are erased → **▼** (Next key) → **▶** (Save key).

•A beep sounds.



\*For quick access to your voice mail box by using **FLASH/CALL WAIT/VOICE MAIL**, you may add pauses between your voice mail box access number and your mail box password in step 6.

EX. 1-222-333-4444 PPPP 8888

Your voice mail box access number

Pauses

Your mail box password

Pressing **REDIAL/PAUSE** once creates a 3.5 seconds delay and counts as one digit. The delay time depends on a telephone company.

## Setting the Voice Mail Tone

If your voice mail service sends a voice mail tone after a new message has been recorded, set to "On". "Voicemail" will be displayed and the VM (Voice mail) indicator will flash when a message has been recorded in your mailbox. You will hear a series of voice mail tones followed by a dial tone after pressing or . (Contact your service provider for details about your service.)

Set to "Off" if:

- you do not subscribe to a voice mail service,
- your voice mail service does not send a voice mail tone, or
- the unit is connected to a PBX.

Your phone comes from the factory set to "On".

**Make sure the unit is not being used and the handset is lifted off the base unit.**

1 Press **FUNCTION**.

2 Scroll to "Program" by pressing or .

Ringer pattern  
►Program  
-----

3 Press .

4 Scroll to "Voicemail tone" by pressing or .

Save mailbox#  
►Voicemail tone  
Set line mode

5 Press .

6 Select "On" or "Off" by pressing or .

Voicemail tone  
:On  
▼▲ ►=Save

7 Press (Save key).

- A beep sounds.
- To exit the programming mode, press **OFF**.

Voicemail tone  
:Off

•You can exit the programming mode any time by pressing **OFF**.

**For assistance, please call: 1-800-211-PANA(7262)**


 
## Voice Mail Service

---


### Listening to Voice Mail Messages

After receiving a voice mail message, “Voicemail” will be displayed and the VM (Voice mail) indicator will flash.

To listen to your voice mail message(s), follow the steps below.

- 1 Press **FLASH/CALL WAIT/VOICE MAIL**, and press  or .
- 2 Follow the pre-recorded instructions.
- 3 When finished, press **OFF**.

- If “Voicemail” still remains on the display or the VM (Voice mail) indicator still flashes even if you have listened to your voice mail message(s), press **FUNCTION**, and press and hold **CLEAR** until the unit beeps. “Voicemail” will disappear and the VM (Voice mail) indicator will turn off.
- If your voice mail service uses a voice mail tone and the recorded message is over 3 minutes long, “Voicemail” may not be displayed and the VM (Voice mail) indicator may not flash.
- If your voice mail service uses a voice mail tone, the tone will be heard from any parallel connected phone. If you use another phone to retrieve messages, you have to dial your access number manually.

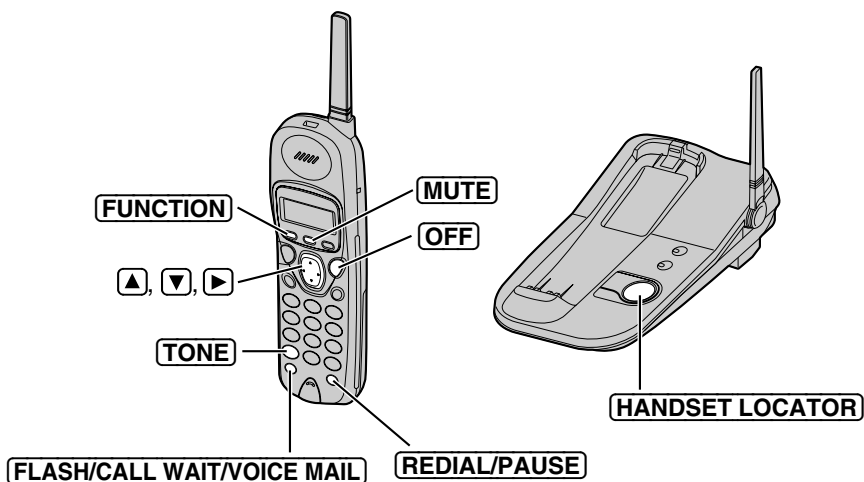

## Automatic Security Code Setting

Each time you place the handset on the base unit, the unit automatically selects one of more than a million security codes. These codes help prevent the unauthorized use of your telephone line by another cordless telephone user.

## Temporary Tone Dialing (For Rotary or Pulse Service Users)

Press **[TONE]** before entering access numbers which require tone dialing.

- The dialing mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the mode will return to pulse.

## Muting Your Conversation

Press **[MUTE]** while talking.

- The display on the right will be shown.
- The other party cannot hear your voice but you can hear theirs.
- To release the mute, press **[MUTE]**, or .

Ex. **[MUTE]** was pressed.

Talk  
<Mute> {■■■■}

## ➡ Special Features

---

### For Call Waiting Service Users

Press **FLASH/CALL WAIT/VOICE MAIL** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- To return to the first caller, press **FLASH/CALL WAIT/VOICE MAIL** again.
- The call waiting service cannot be used when a parallel connected telephone is in use.
- If this function does not operate properly, consult your telephone company for details.

### Call Waiting Caller ID Feature

Call Waiting Caller ID Feature allows your handset to display the second caller's information. After you hear a call-waiting tone while talking, the handset will display the caller's name with the phone number and "----Waiting----".

BROWN, NANCY 1-555-666-7777 ----Waiting----
---

- Please contact your telephone company for details and availability in your area.

### How to Use the PAUSE Button (For Analog PBX Line/Long Distance Service Users)

We recommend you press **REDIAL/PAUSE** if a pause is required for dialing with a PBX or to access a long distance service.

Ex. Line access number **9** (PBX)

**9** ➡ **REDIAL/PAUSE** ➡ Phone number

- Pressing **REDIAL/PAUSE** once creates a 3.5 second pause. This prevents misdialing when you redial or dial a stored number.
- Pressing **REDIAL/PAUSE** more than once increases the length of the pause between numbers.

### Handset Locator

You can locate the handset or page the handset user with beep tones from the base unit.

**1** Press **HANDSET LOCATOR**.

- The IN USE/CHARGE/HOLD indicator flashes. The handset beeps for 1 minute and "Paging" is displayed.

**2** To stop paging, press **HANDSET LOCATOR** again or press **OFF** on the handset.

# FLASH Button

Pressing **FLASH/CALL WAIT/VOICE MAIL** allows you to use special features of your host PBX such as transferring an extension call or accessing special telephone services (optional) such as call waiting.

- Pressing **FLASH/CALL WAIT/VOICE MAIL** causes to release following operations:
  - temporary tone dialing, or
  - muting your conversation.

## Selecting the flash time

The flash time depends on your telephone exchange or host PBX. You can select the following flash times: “700, 600, 400, 300, 250, 110, 100 or 90 ms (milliseconds)”. Your phone comes from the factory set to “700 ms”.

**Make sure the unit is not being used and the handset is lifted off the base unit.**

- 1 Press **FUNCTION**.
- 2 Scroll to “Program” by pressing **▼** or **▲**.
- 3 Press **▶**.
- 4 Press **▶** at “Set flash time”.
  - The current setting is displayed.
- 5 Select the desired time by pressing **▼** or **▲**.
- 6 Press **▶** (Save key) .
  - A beep sounds.
  - To exit the programming mode, press **OFF**.

```
Ringer pattern
▶Program
-----
```

```
-----
▶Set flash time
Save mailbox#
```

```
Flash time
              : 700ms
▼▲           ▶=Save
```

```
Flash time
              : 110ms
```


- You can exit the programming mode any time by pressing **OFF**.
- If the unit is connected via a PBX, PBX functions (transferring a call etc.) might not work correctly. Consult your PBX supplier for the correct setting.

# Wall Mounting


---

This unit can be mounted on a wall phone plate.


- 1 Push the hook and turn it around.  
Turn the hook until a click is heard.

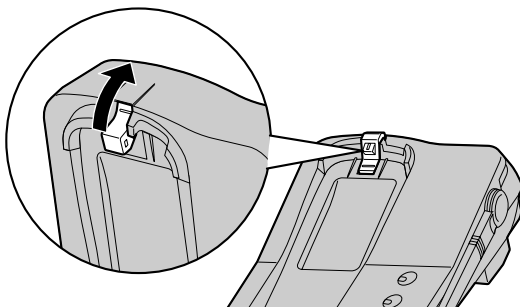

- 2 Connect the AC adaptor.

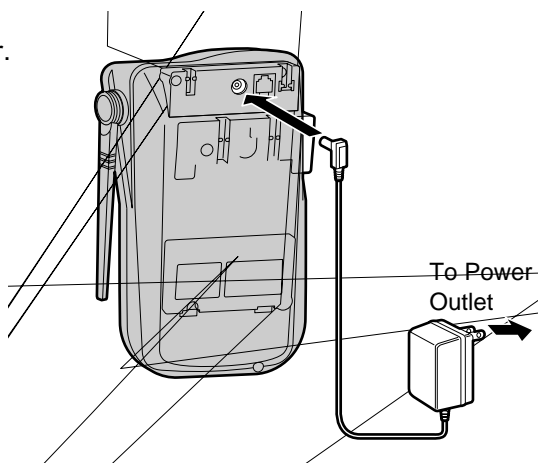


- 3 Tuck the telephone line cord inside the wall mounting adaptor, then push it in the direction of the arrow.
  - The word "UP" should face upward.

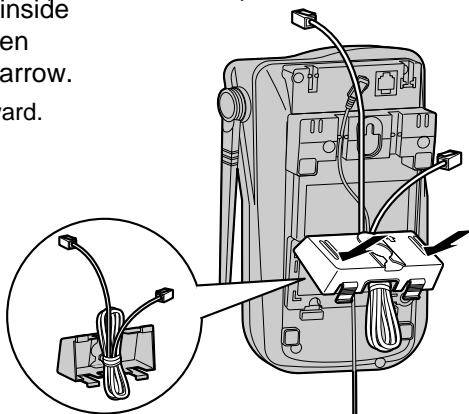




## 4 Connect the telephone line cord. Mount the unit, then slide down.

- Raise the antenna.
- Fasten the telephone line cord to prevent it from being disconnected.

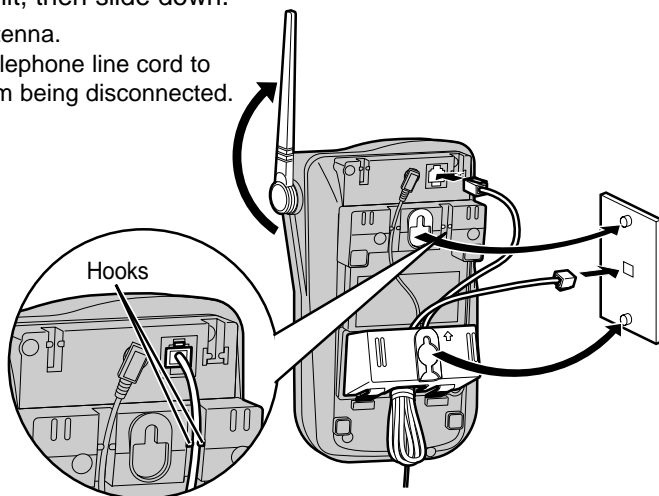

## 5 To charge the handset battery: Fix the charge contacts (①) and insert the hook to the handset hole (②).

- The IN USE/CHARGE/HOLD indicator lights.

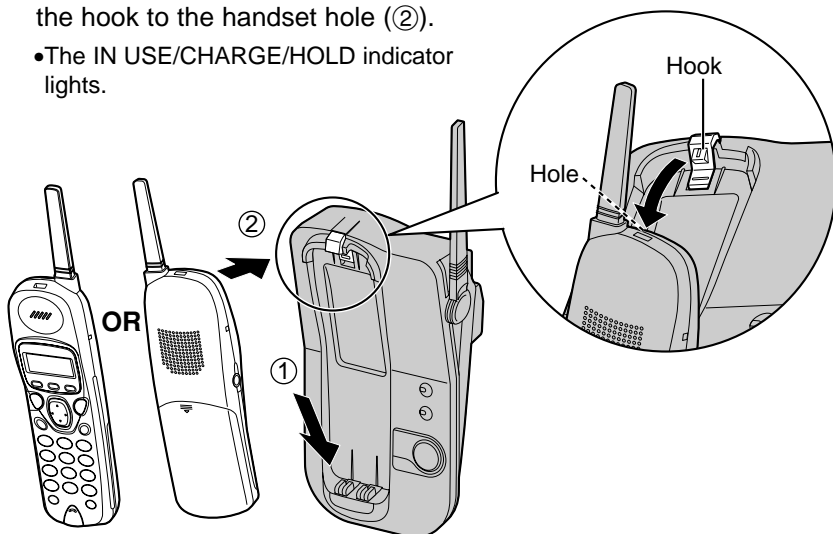

---


You can hang the handset on your belt or pocket using the belt clip.

**To attach the belt clip**

**To remove the belt clip**

## Connecting an optional headset to the handset


Open the headset jack cover, and connect an optional headset to the headset jack as shown below.

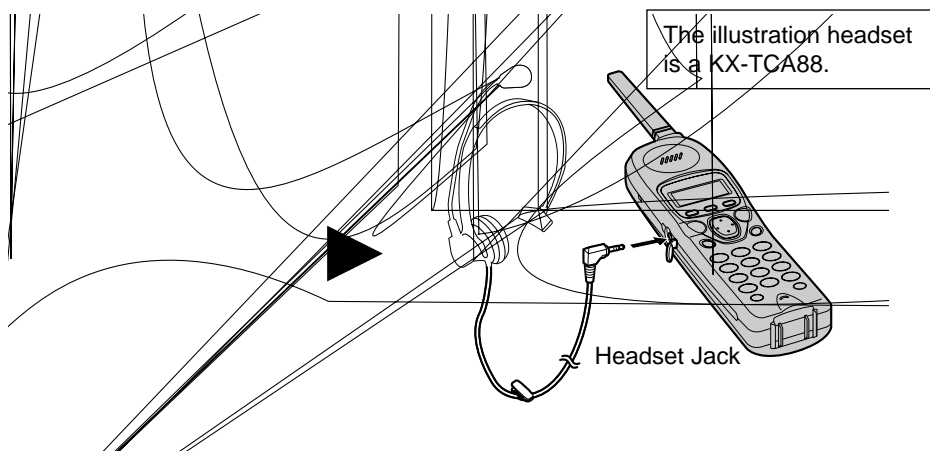


# Battery Replacement

If "Recharge" is displayed and/or "[ ■ ]" flashes after being fully charged, replace the battery with a new Panasonic P-P511 (PQPP511SVC) battery. To order, call the accessories telephone number on page 2.

- 1 Press the notch on the handset cover firmly and slide it as indicated by the arrow.

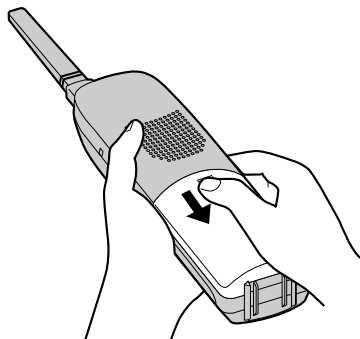

- 2 Remove the old battery. Insert the new battery into the handset as shown (①), matching the correct polarity. Press the battery down until it places into the compartment (②).

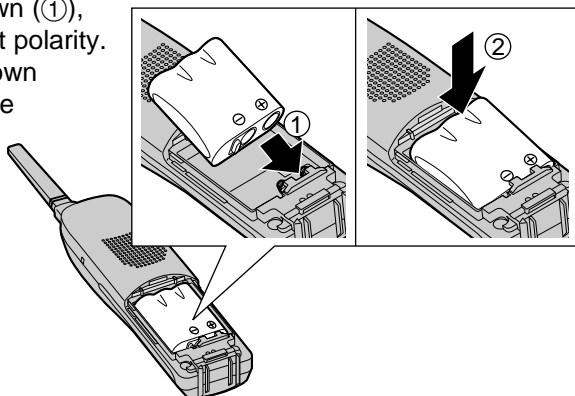

- 3 Close the cover. Make sure you charge the new battery for about 15 hours in order to display the battery strength prompt correctly (p. 12).


A nickel cadmium battery that is recyclable powers the product you have purchased. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.




# Adding Another Phone

---



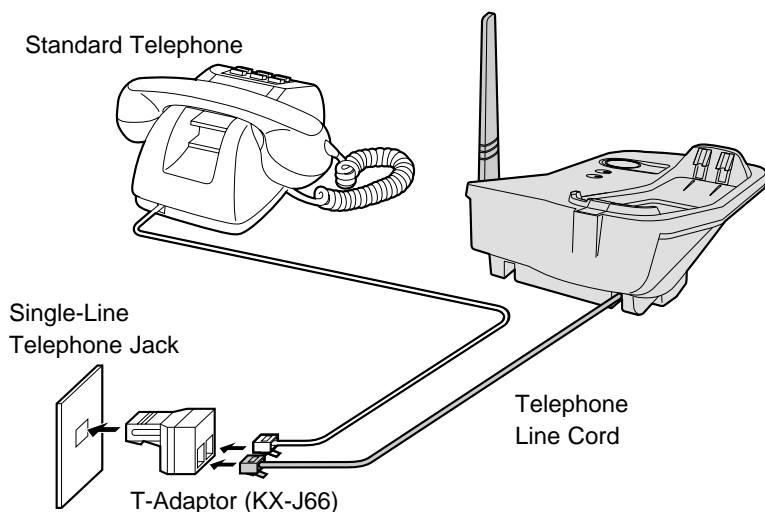



This unit will not function during a power failure. To connect a standard telephone on the same line, use the Panasonic T-adaptor KX-J66. To order, call the accessories telephone number on page 2.





Problem	Remedy
The unit does not work.	<ul style="list-style-type: none"><li>•Check the settings (p. 11–15).</li><li>•Charge the battery fully (p. 12).</li><li>•Clean the charge contacts and charge again (p. 13).</li><li>•Install the battery properly (p. 12).</li><li>•Place the handset on the base unit and unplug the AC adaptor to reset. Plug in, and try again.</li><li>•Re-install the battery and place the handset on the base unit (p. 51). Try again.</li></ul>
“No link to base Place on cradle and try again.” is displayed and an alarm tone sounds.	<ul style="list-style-type: none"><li>•You are too far from the base unit. Move closer and try again.</li><li>•Place the handset on the base unit and try again.</li><li>•Plug in the AC adaptor.</li><li>•Raise the base unit antenna.</li></ul>
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none"><li>•Locate the handset and the base unit away from other electrical appliances (p. 3).</li><li>•Move closer to the base unit.</li><li>•Raise the base unit antenna.</li><li>•Press  to select a clearer channel in the talk or speakerphone mode.</li></ul>
The unit does not ring.	<ul style="list-style-type: none"><li>•The ringer volume is set to OFF. Set to HIGH or LOW (p. 18).</li></ul>
The handset display is blank.	<ul style="list-style-type: none"><li>•Charge the battery fully (p. 12).</li></ul>

## ➡ Troubleshooting



Problem	Remedy
You cannot program items, such as the dialing mode.	<ul style="list-style-type: none"><li>• Programming is not possible while the unit is in the talk or speakerphone mode, when viewing the Caller List/directory list.</li><li>• Do not pause for over 60 seconds while programming.</li><li>• Move closer to the base unit.</li><li>• , ,  or  may have been pressed when you picked up the handset. Press <b>OFF</b> and try again.</li></ul>
Previously programmed information is erased.	<ul style="list-style-type: none"><li>• If a power failure occurs, programmed information may be erased. Reprogram if necessary.</li></ul>
You cannot store a name and phone number in the directory.	<ul style="list-style-type: none"><li>• You cannot store an item in the directory while the unit is in the talk or speaker mode.</li><li>• Do not pause for over 60 seconds while storing.</li></ul>
While programming or searching, the unit starts to ring and stops the program/search.	<ul style="list-style-type: none"><li>• To answer the call, press  or . Start again from the beginning after hanging up.</li></ul>
The unit does not display the caller's name and/or phone number.	<ul style="list-style-type: none"><li>• You need to subscribe to a Caller ID service.</li><li>• Other telephone equipment may be interfering with your phone. Disconnect it and try again.</li><li>• Other electrical appliances connected to the same outlet may be interfering with the Caller ID information.</li><li>• Telephone line noise may be affecting the Caller ID information.</li></ul>



Problem	Remedy
The handset display exits the Caller List.	<ul style="list-style-type: none"><li>•Do not pause for over 60 seconds while searching.</li></ul>
When a second call is received during a conversation, the unit does not display the new caller's name and/or phone number.	<ul style="list-style-type: none"><li>•The line mode selection is incorrect. See page 15.</li><li>•The caller requested not to send his/her information. See page 26.</li></ul>
You cannot page the handset.	<ul style="list-style-type: none"><li>•The handset is too far from the base unit.</li><li>•The handset is engaged in an outside call, viewing the Caller List/directory list. Wait until the IN USE/CHARGE/HOLD indicator light goes out.</li></ul>
You cannot redial by pressing <b>REDIAL/PAUSE</b> .	<ul style="list-style-type: none"><li>•If the last number dialed was more than 32 digits long, the number will not be redialed correctly.</li><li>•The button has a double function as either redial or pause. It will redial the last number dialed if pressed at the outset of a call (p. 22). If another number has been dialed first, it will operate as a pause button (p. 46).</li></ul>
"Recharge" is displayed, "{ ■}" flashes or the unit beeps intermittently.	<ul style="list-style-type: none"><li>•Charge the battery fully (p. 12).</li></ul>
You charged the battery fully, but "Recharge" is still displayed and/or "{ ■}" continues to flash.	<ul style="list-style-type: none"><li>•Clean the charge contacts and charge again (p. 13).</li><li>•Install a new battery (p. 51).</li></ul>
The IN USE/CHARGE/HOLD indicator light does not go out after the battery has been charged.	<ul style="list-style-type: none"><li>•This is normal.</li></ul>

## ➡ Troubleshooting

---

Problem	Remedy
You cannot have a conversation using the headset.	<ul style="list-style-type: none"><li>• Make sure that an optional headset is connected properly (p. 50).</li><li>•  may have been pressed. If "SP-phone" is displayed on the handset, press  to continue the conversation with the headset.</li></ul>
If you cannot solve your problem	<ul style="list-style-type: none"><li>• Call our customer call center at 1-800-211-PANA(7262).</li><li>• Panasonic's e-mail address for customer inquiries: consumerproducts@panasonic.com for customers in the USA or Puerto Rico ONLY</li></ul>



# Important Safety Instructions



When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicer when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized servicer when the following conditions occur:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If liquid has been spilled into the unit.
  - C. If the unit has been exposed to rain or water.
  - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicer.
  - E. If the unit has been dropped or physically damaged.
  - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

## SAVE THESE INSTRUCTIONS

For assistance, please call: 1-800-211-PANA(7262)

## Important Safety Instructions

---

### **CAUTION:**

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

### **WARNING:**

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

- The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

# FCC and Other Information



If requested by the telephone company, inform them as follows:  
Registration No. ....(found on the bottom of the unit)  
Ringer Equivalence .....0.1B  
The particular telephone line to which the equipment is connected.

This unit must not be connected to a coin operated line.  
If you are on a party line, check with your local telephone company.

**Ringer Equivalence No. (REN):**

The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

In the event terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped.

However, where prior notice is impractical, the company may temporarily cease service providing that they:

- (a) Promptly notify the customer.
- (b) Give the customer an opportunity to correct the problem with their equipment.
- (c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

The Telephone Company may make changes in its communications facilities, equipment, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in 47 CFR Part 68.

If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

When programming emergency numbers and/or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

## FCC and Other Information

---

### **CAUTION:**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

### **Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce, or eliminate, interference.

Operating near 2.4GHz electrical appliances may cause interference. Move away from the electrical appliances and/or press the CH (Channel) button.

### **CAUTION:**

To comply with FCC RF exposure requirements, the base unit should be installed with its antenna located at 20 cm or more from persons and handset should be carried with the specific belt-clip provided for the handset to ensure compliance. Other non-tested belt-clips or similar body-worn accessories may not comply, therefore, should be avoided.

This equipment is hearing aid compatible.

A TIA/EIA-IS-968 compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is also TIA/EIA-IS-968 compliant.

- 
- **Environment** — do not place the unit in a room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
  - **Medical** — consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 2402MHz to 2480MHz, and the power output level can range 0.015 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.
  - **Routine care** — wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.
  - **If there is any trouble** — disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Service Centers. If the known working phone does not operate properly, consult your telephone company.

# Index

---

<b>A</b>	Accessories .....	2	<b>P</b>	PAUSE .....	46
	Answering calls .....	25		Pulse service .....	45
	Auto talk .....	17, 25	<b>R</b>	Redial .....	22
	Automatic Security Code Setting ..	45		Redial list .....	23
<b>B</b>	Backlit LCD .....	24		Ringer Off .....	18
	Base location .....	3		Ringer Pattern .....	19
	Battery, Charge .....	3, 12		Ringer Volume .....	18
	Battery information .....	13		Rotary service, tone dialing .....	45
	Battery replacement .....	51	<b>S</b>	Safety Instructions .....	57
	Battery strength .....	13		Shipping product for service .....	63
	Belt Clip .....	50		SP-phone .....	22
<b>C</b>	Call on hold .....	23	<b>T</b>	Troubleshooting .....	53
	Call waiting caller ID .....	46	<b>V</b>	Voice mail .....	42
	Call waiting tone .....	46		Volume control .....	24
	Caller ID Auto Edit feature ....	30, 31			
	Caller ID service .....	26, 46			
	Caller List				
	editing .....	30			
	erasing .....	33			
	storing .....	32			
	viewing .....	27, 28			
	Calling back from Caller ID List...	29			
<b>D</b>	Dialing mode .....	14			
	Directory .....	34			
	dialing .....	39			
	editing .....	40			
	erasing .....	41			
	finding .....	38			
	name and symbols .....	36			
	storing .....	34			
	Display .....	8			
<b>F</b>	FCC and other information .....	59			
	FLASH button .....	47			
	Flash time .....	47			
	Function Menu .....	16			
<b>H</b>	Handset Locator .....	46			
	Headset, optional .....	50			
	Hold alarm .....	23			
<b>I</b>	Installation				
	AC adaptor .....	11			
	Adding another phone .....	52			
	Battery .....	12			
	Telephone line cord .....	11			
<b>L</b>	LCD contrast .....	20			
	Lighted Handset Keypad .....	24			
	Line mode .....	15			
	Location of controls .....	6, 7			
<b>M</b>	Making Calls .....	21, 22			
	Microphone .....	22			
	Muting a conversation .....	45			
<b>N</b>	Noise .....	3			

## For product service

- Call 1-800-211-PANA(7262) for the location of an authorized servicer.
- Panasonic's e-mail address for customer inquiries:  
consumerproducts@panasonic.com  
for customers in the USA or Puerto Rico ONLY

 
## When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom

---

- Send the unit to an authorized servicer, prepaid and adequately insured.
- Do not send your unit to the Panasonic Consumer Electronics Company listed on the back cover or to executive or regional sales offices. These locations do not repair consumer products.



**If you need assistance with the set-up or operation,  
please call 1-800-211-PANA(7262)**

**Panasonic Consumer Electronics Company,  
Division of Matsushita Electric Corporation of America**  
One Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Sales Company,  
Division of Matsushita Electric of Puerto Rico, Inc.**  
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park  
Carolina, Puerto Rico 00985